Honeywell Home Boiler Room Valves



DU145

Automatic bypass and differential pressure valve

APPLICATION

The automatic bypass and differential pressure valve controls water flow in the heating circuit according to the water pressure across it and is used to maintain a minimum flow rate through the boiler and to limit circulation pressure when other water paths are closed. A bypass circuit must be installed if the Boiler manufacturer requires one, or specifies that a minimum flow rate has to be maintained whilst the Boiler is firing. The use of automatic bypass valves becomes particularly important when heating systems include large numbers of thermostatic radiator valves (TRVs) - whilst the TRVs are open the automatic bypass valve remains closed, however, as the TRVs start to close, the automatic bypass valve starts to open maintaining the required water flow through the boiler.

Using an automatic bypass valve is also likely to reduce noise in systems caused by excess water velocities. It also helps to reduce the corrosion caused by flue gas condensation as the boiler return temperature is raised.

SPECIAL FEATURES


- Maintain minimum flow through a boiler
- Minimises flow noise
- Hinders boiler corrosion
- Differential pressure finely adjustable using indicator scale
- Presetting accessible directly
- Setting value is in meters water column
- No external controls required



TECHNICAL DATA

Media					
Medium:	Water or water-glycol mixture, quality to VDI 2035				
pH-value:	8 - 9.5				
Connections/Sizes					
Connection sizes:	3/4"				
Operating temperatures					
Max. operating temperature	110 °C (230 °F)				
medium:					
Pressure values					
Max. operating pressure:	3 bar (43.5 psi)				
Differential pressure	0.1 - 0.6 bar (1.5 - 8.7 psi)				
presetting range:					
Specifications					
For system capacities up to	70 kW (60.000 kcal/h)				
approximately:					
Factory setting:	0.2 bar (2.9 psi)				

CONSTRUCTION

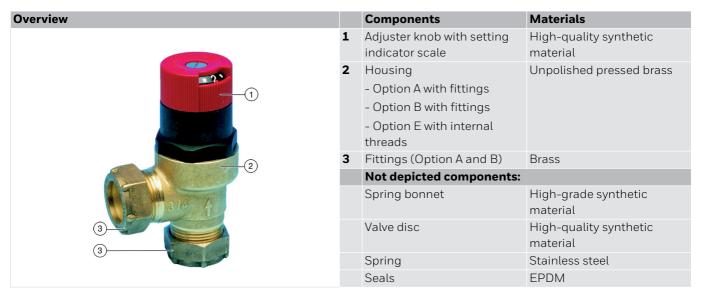

METHOD OF OPERATION

The automatic bypass and differential pressure valve is installed between the supply and return mains pipeline. The differential pressure is set according to the minimum flow required for the boiler and the available pump head. When the differential pressure is reached, for example because of closing TRVs, the valve starts to open. As the differential pressure increases across the valve the valve is further opened and the flow increased. When the differential pressure decreases, for example because TRVs are opening again, the valve closes and the flow is redirected from the bypass to the heating loop.

TRANSPORTATION AND STORAGE

Keep parts in their original packaging and unpack them shortly before use.

The following parameters apply during transportation and storage:

Parameter	Value
Environment:	clean, dry and dust free
Min. ambient temperature:	0 °C
Max. ambient temperature:	40 °C
Max. ambient relative humidity:	75 % *


^{*}non condensing

INSTALLATION GUIDELINES

Setup requirements

- Installation between flow and return
- Not suitable for district heating installations
- For maintenance purposes it is recommended that shut-off valves be fitted on both sides of the bypass valve
- DU145 can be installed:
 - On heating systems with three-way mixing valves
 - On heating systems with four-way mixing valves
 - On gas-fired hot water circulation heating systems

Installation Example

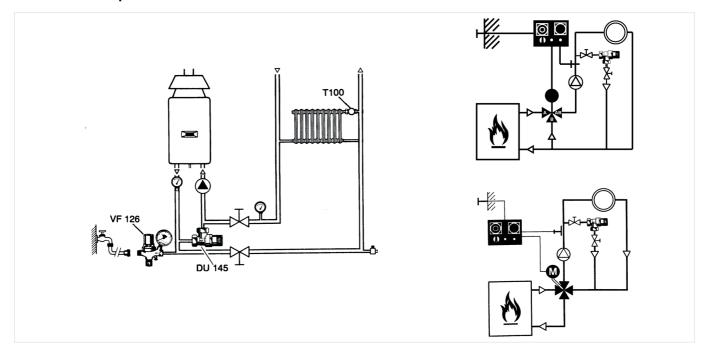

TECHNICAL CHARACTERISTICS

Flow Chart


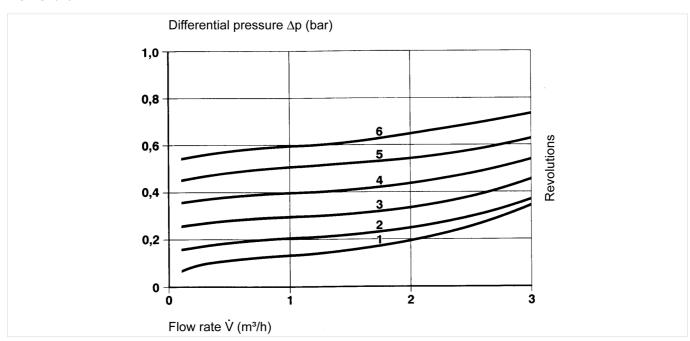


Fig. 1 Pressure drop in dependency on the flow rate.

DIMENSIONS

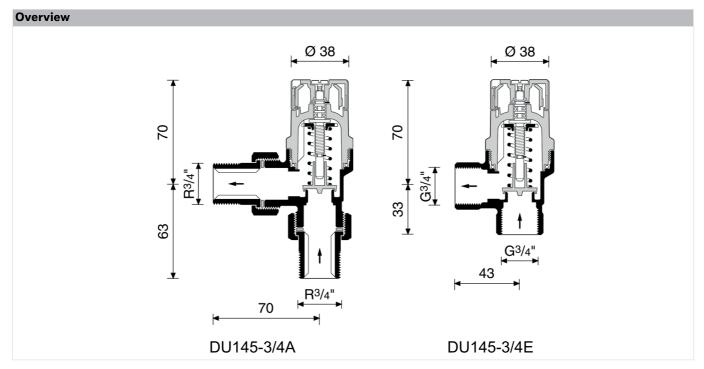

ORDERING INFORMATION

The following tables contain all the information you need to make an order of an item of your choice. When ordering, please always state the type, the ordering or the part number.

Options

The valve is available in the following sizes: 3/4"

- standard
- not available

		DU145-3/4A	DU145-3/4B	DU145-3/4E
Connection sizes:	with threaded union connectors $R^3/4$ "	•	-	-
	with compression fittings for 22 mm copper pipe	-	•	-
	copper pipe			
	with internal threads G ³ / ₄ "	-	-	•

Pre-setting range: 0.1...0.6 bar (1.5...8.7 psi)

Accessories

	Description		Dimension	Part No.	
ő	VST06 Solder union connection set for DU145-3/4A				
		2 solder union connectors, 2 backnuts and 2 seal rings. For 22 mm pipe.	3/4"	VST06-3/4B	
	ZS109M	Compression ring and nut for DU 145-3/4E			
		Support inserts have to be used for copper or soft steel pipe with 1.0 mm wall			
		thickness.			
			³ / ₄ " x 18 mm	ZS109M-3/4G	
			³ / ₄ " x 22 mm	ZS109M-3/4H	
		with support insert (2 pcs each)	³ / ₄ " x 18 mm	ZS109M-	
				3/4GS	

For more information

homecomfort.resideo.com/europe



Ademco 1 GmbH Hardhofweg 40 74821 MOSBACH GERMANY

Phone: +49 6261 810 Fax: +49 6261 81309 Manufactured for and on behalf of the Pittway Sàrl, La Pièce 4, 1180 Rolle, Switzerland by its Authorised Representative Ademco 1 GmbH ENOH-2700GE25 R0420

Subject to change

© 2020 Pittway Sàrl. All rights reserved.
This document contains proprietary information of Pittway Sàrl and its affiliated companies and is protected by copyright and other international laws. Reproduction or improper use without specific written authorisation of Pittway Sàrl is strictly forbidden. The Honeywell Home trademark is used under license from Honeywell International Inc.

